




Installation & User Manual

I N T E R N A T I O N A L

THE NEXT CREATION™ FAN HANDSET BUTTON EXPLANATION

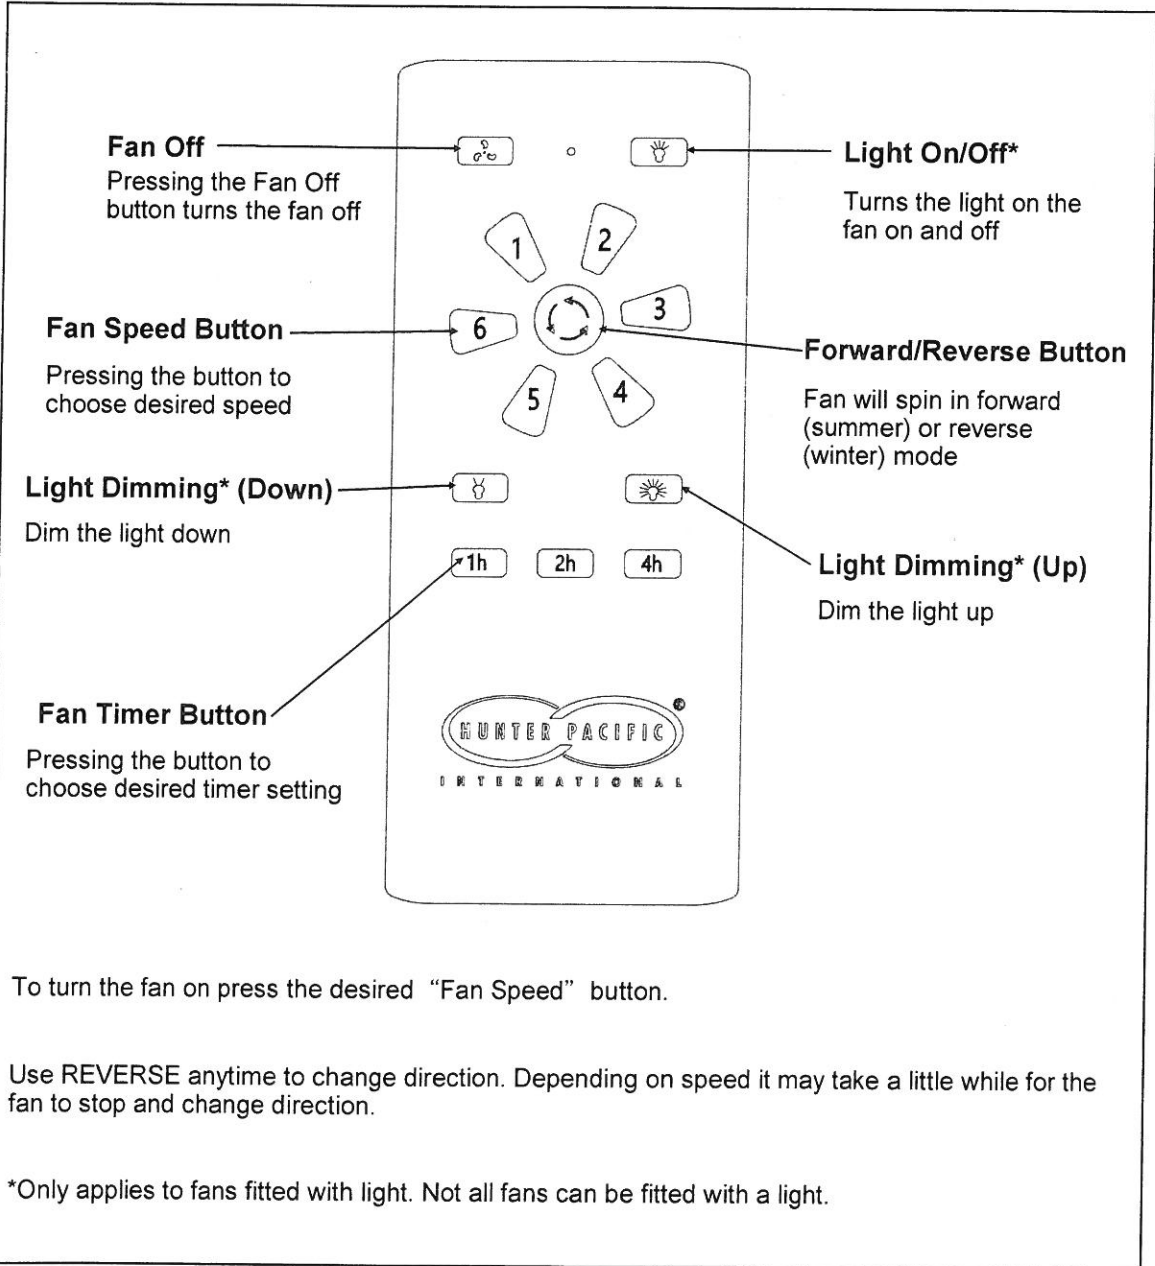

To turn the fan on press the desired "Fan Speed" button.

Use REVERSE anytime to change direction. Depending on speed it may take a little while for the fan to stop and change direction.

*Only applies to fans fitted with light. Not all fans can be fitted with a light.



1. **Do not** attempt to operate the fan or light (if fitted) with any wall control that is not approved by Hunter Pacific for use with its fans. DO NOT use solid state controllers. The use of unapproved controllers may void your warranty.

2. **Do not** mix blade sets from one fan to another as this may upset the balance of the fan. If only one blade is damaged you are still required to replace with a new set.



I N T E R N A T I O N A L

Installation & User Manual

THE NEXT CREATION™ FAN CONTROL MODULE AND HANDSET PROGRAMMING

*HANDSET PROGRAMMING ONLY NEEDED WHEN GETTING NEW HANDSET

MAKE SURE THE ISOLATION SWITCH IS ON OR REMOTE CONTROL WILL NOT WORK

Handset Battery Installation/Replacement

Open the battery compartment by pushing the cover away from you. UNWRAP THE PLASTIC FROM AROUND NEW BATTERIES (if wrapped). Observe polarity and make sure battery sits properly in recess. Slide the cover back into place.

How To Add a Replacement Handset

For Next Creation No Light Fan

The receiver can learn the identification code for a new handset using the following procedure:

- A. Turn off power to fan at isolation / wall switch and wait for 30 seconds then turn power back on at the isolation / wall switch, the fan will beep once.
- B. Press and hold the "Forward/Reverse" button until you hear one beep from the receiver. The remote will then be linked to the fan. Two handsets can be paired to each fan, and the same handset can control multiple fans.

For Next Creation LED Light Fan

The receiver can learn the identification code for a new handset using the following procedure:

A. To program the handset to the fan

1. Turn off power to fan at isolation / wall switch and wait for 30 seconds then turn power back on at the isolation / wall switch, the fan will beep once.
2. Press and hold "Forward/Reverse" button until you hear once beep from the receiver. The remote will then be linked to the fan. Two handsets can be paired to each fan, and the same handset can be control multiple fans.

B. To program the handset to the LED light

1. Turn off power to fan at isolation / wall switch and wait for 30 seconds then turn power back on at the isolation / wall switch, the fan will beep once.
2. Press and hold the "Fan Off" button until you see the light flash once. The remote will then be linked to the LED light. Two handsets can be paired to each fan, and the same handset can be control multiple fans.

NOTE: THE MAINS POWER TO THE CONTROL MODULE MUST BE SWITCHED ON-OFF VIA AN ISOLATION SWITCH. **NOT** THE BUTTONS ON THE HANDSET.

SEE TERMS AND CONDITIONS OF WARRANTY. YOU WILL BE CHARGED A SERVICE FEE IF THE PRODUCT IS NOT DEFECTIVE OR IS DAMAGED BY POWER SURGES, LIGHTNING, WEATHER, MISUSE/ ABUSE AND SIMILAR SITUATIONS. ALL INSTALLATION INSTRUCTIONS MUST BE FOLLOWED.



1. **Do not** attempt to operate the fan or light (if fitted) with any wall control that is not approved by Hunter Pacific for use with its fans. DO NOT use solid state controllers. The use of unapproved controllers may void your warranty.

2. **Do not** mix blade sets from one fan to another as this may upset the balance of the fan. If only one blade is damaged you are still required to replace with a new set.